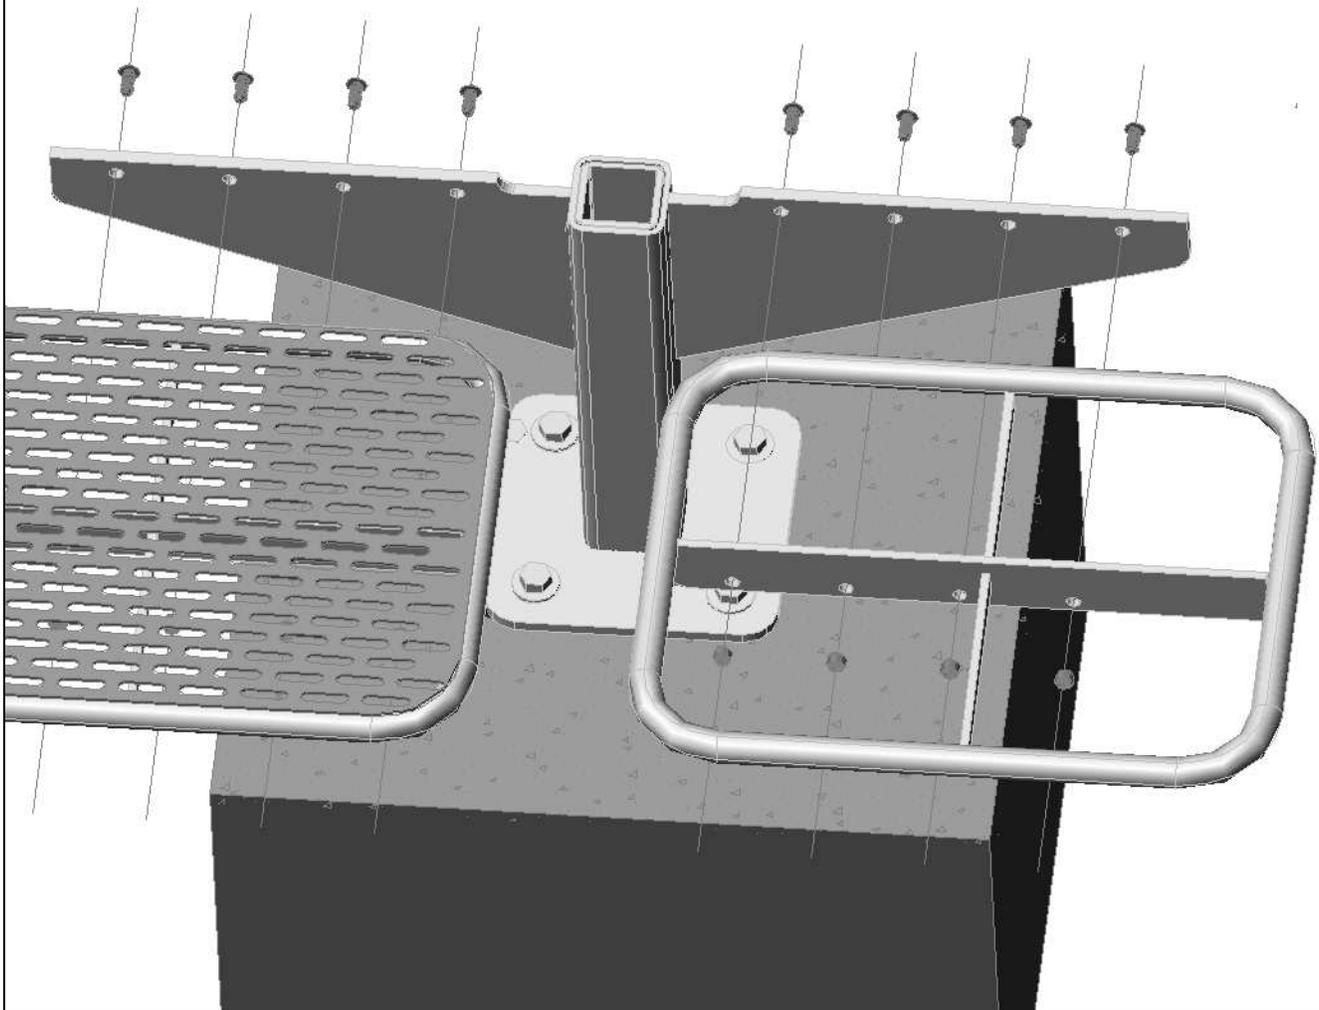


*After seat support pedestal is installed on concrete pad, attach the two seat sections with eight 3/8" x 1" button-head machine screws and lock nuts provided.*



*FIGURE 4 – SEAT ASSEMBLY*